


# Simon XT User Manual

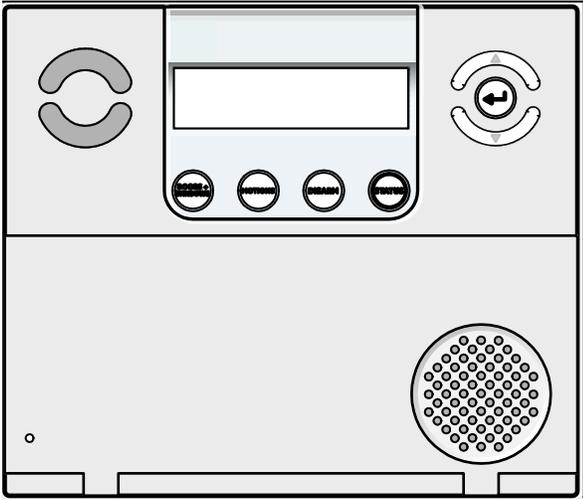

P/N 466-2266 • REV E • OCT12

**Copyright** © 2012 UTC Fire & Security Americas Corporation, Inc.  
Interlogix is part of UTC Climate Controls & Security, a unit of United Technologies Corporation. All rights reserved.

**Disclaimer** The information in this document is subject to change without notice. UTC Fire & Security assumes no responsibility for inaccuracies or omissions and specifically disclaims any liabilities, losses, or risks, personal or otherwise, incurred as a consequence, directly or indirectly, of the use or application of any of the contents of this document. For the latest documentation, contact your local supplier or visit us online at <http://www.utcfireandsecurity.com/>.

This publication may contain examples of screen captures and reports used in daily operations. Examples may include fictitious names of individuals and companies. Any similarity to names and addresses of actual businesses or persons is entirely coincidental.

**Trademarks and patents** Simon and Simon XT are trademarks of UTC Fire & Security.

Other trade names used in this document may be trademarks or registered trademarks of the manufacturers or vendors of the respective products.

**Manufacturer** UTC Fire & Security Americas Corporation, Inc.  
1275 Red Fox Rd., Arden Hills, MN 55112-6943, USA

## Software license agreement

**Important:** This end-user license agreement (“Agreement”) is a legal agreement between UTC FIRE & SECURITY and You. Read the following terms and conditions carefully before installing or using this Software. This agreement provides a license from UTC FIRE & SECURITY to use the Software. It also contains warranty information, disclaimers, and liability limitations. Installing and/or using the Software confirms Your agreement to be bound by these terms and conditions. If You do not agree with these terms and conditions, do not install or use the Software or, if already installed, immediately cease all use of the Software and promptly uninstall all components of the Software.

### 1. Definitions

The following definitions apply to this document:

- a. “UTC FIRE & SECURITY”, with respect to title to or warranty of the Software, means UTC Fire & Security Inc., a Delaware corporation.
- b. “Software” means the executable software or firmware programs and accompanying documentation installed on the UTC FIRE & SECURITY products, plus any upgrades, modified versions, updates, additions, and copies of the software furnished to Customer during the term of the license granted herein.
- c. “Documentation” means all associated media, printed materials, and electronic documentation accompanying the Software.
- d. “Licensed Product” means the Software and Documentation.
- e. “Customer” means the person or organization, or parent or subsidiary thereof, who uses the Software for its intended purposes, and excludes distributors, authorized resellers, value-added resellers and original equipment manufacturers. Customer may be referred to as You or Your, whether an individual or a business entity of any kind.
- f. “Machine” means the computer, workstation, terminal, or other hardware product on which the Software is installed.

### 2. License

All rights to and in the Licensed Product, including, but not limited to, copyrights, patents, trademarks, and trade secrets, belong to UTC FIRE & SECURITY, and UTC FIRE & SECURITY retains title to each copy of the Software. You agree that UTC FIRE & SECURITY at any time, upon reasonable notice, may audit Your use of the Software for compliance with the terms and conditions of this Agreement. Subject to the terms and conditions of this Agreement, UTC FIRE & SECURITY grants You a nonexclusive license to use the Software, but only in the country where acquired, provided that You agree to the following:

You may:

- a. install and use the Software on a single Machine at one time, unless You have purchased additional copies of the Software, in which case You may install the software on the number of Machines for which You have purchased copies of the Software;
- b. use the original copy of the Software provided to You for backup purposes.

You may not:

- a. transfer or distribute the Licensed Product to others, in electronic format or otherwise, and this Agreement shall automatically terminate in the event of such a transfer or distribution;
- b. use the Software over a computer network;
- c. sell, rent, lease, or sublicense the Software;
- d. copy or modify the Licensed Product for any purpose, including for backup purposes.

### 3. Term

This Agreement is effective until terminated. You may terminate this Agreement by uninstalling all components of the Software from all Machines and returning the Software to UTC FIRE & SECURITY. UTC FIRE & SECURITY may terminate this Agreement if You breach any of these terms and conditions. Upon termination of this Agreement for any reason, You agree to uninstall all components of the Software and return the Licensed Product to UTC FIRE & SECURITY. All provisions of this Agreement relating to (i) disclaimer of warranties; (ii) limitations on liability, remedies, and damages; and (iii) UTC FIRE & SECURITY’s proprietary rights, shall survive termination of this Agreement.

### 4. Object code

The Software is delivered in object code only. You may not alter, merge, modify, adapt, or translate the Software, nor decompile, disassemble, reverse-engineer, or otherwise reduce the Software to a human-perceivable form, nor create derivative works or programs based on the Software.

## 5. Limited warranty

UTC FIRE & SECURITY warrants that for one (1) year from the date of delivery of the Licensed Product (Software Warranty Period), the functions contained in the Software will be fit for their intended purpose as described in the applicable Documentation from UTC FIRE & SECURITY, and will conform in all material respects to the specifications stated in such Documentation. UTC FIRE & SECURITY does not warrant that the operation of the Software will be uninterrupted or error-free. SECURITY does warrant that the media on which the Software is furnished will be free from defects in materials and workmanship under normal use for a period of thirty (30) days from the date of delivery (Media Warranty Period). Except as specifically provided therein, any other software and any hardware furnished with or accompanying the Software is not warranted by UTC Fire & Security.

Your exclusive remedy under this limited warranty for nonconforming Software shall be repair or replacement of the Software, at the sole discretion of UTC Fire & Security. To obtain a repair or replacement of nonconforming Software, contact UTC Fire & Security Customer Service toll-free at 888-GESECURITY or online at <http://www.utcfireandsecurity.com/> during the Software Warranty Period.

Except as expressly provided above, the licensed product is provided "as is" without warranty of any kind, either expressed or implied, including, but not limited to, implied warranties of merchantability or fitness for a particular purpose and, except as expressly provided above, You assume the entire risk as to the quality and performance of the licensed product.

## 6. Limitation of liability

UTC Fire & Security's sole obligation or liability under this agreement is the repair or replacement of nonconforming software and/or defective media according to the limited warranty above. In no event will UTC FIRE & SECURITY be liable for damages, whether consequential, incidental, or indirect, nor for loss of data, loss of profits, or lost savings, arising from use or inability to use the software or documentation (or any hardware furnished with the software), even if UTC FIRE & SECURITY has been advised of the possibility of such damages, nor for any claim by any third party.

## 7. General

Any materials provided to You by UTC Fire & Security shall not be exported or reexported in violation of any export provisions of the USA or any other applicable jurisdiction. Any attempt to sublicense, assign, or transfer any of the rights, duties, or obligations hereunder shall be void. This Agreement shall be governed by and interpreted under the laws of the State of New York, United States of America, without regard to conflicts of law provisions. You hereby consent to the exclusive jurisdiction of the state and federal courts located in Multnomah County, Oregon, to resolve any disputes arising under or in connection with this Agreement, with venue in Portland, Oregon.

## 8. Restricted rights legend

The Licensed Product is provided with RESTRICTED RIGHTS. In the event the United States Government or an agency thereof is granted a license, the following additional terms apply: Restricted Computer Software, as defined in the Commercial Computer Software–Restricted Rights clause at Federal Acquisition Regulations 52.227-19, and the restrictions as provided in subparagraphs (c)(1) and (c)(2) thereof; and as applicable, the Government's rights to use, modify, reproduce, release, perform, display, or disclose the Software also are restricted as provided by paragraphs (b)(2) and (b)(3) of the Rights in Noncommercial Technical Data and Computer Software–Small Business Innovative Research (SBR) Program clause at DFARS 252.227-7018.

## 9. Acknowledgment

You acknowledge that You have read and understand this agreement and agree to be bound by its terms. You further agree that this agreement is the complete and exclusive statement of the agreement between You and UTC Fire & Security, and supersedes any proposal or prior agreement, oral or written, and any other communication relating to the subject matter of this agreement.

### Intended use

Use this product only for the purpose it was designed for; refer to the data sheet and user documentation. For the latest product information, contact your local supplier or visit us online at <http://www.utcfireandsecurity.com/>.

### FCC compliance

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the affected equipment and the panel receiver to separate outlets, on different branch circuits.

Consult the dealer or an experienced radio/TV technician for help.

FCC Part 15 registration number: B4Z-910C-SIMON.

Part 68. This equipment complies with Part 68 of the FCC rules and the requirements adopted by ACTA. A label on this equipment contains a product identifier in the format **US:AAAEQ##TXXXX**. You must provide this number to the telephone company upon request.

FCC Part 68 registration number: US:B4ZAL02B55910.

The plug and jack used to connect this equipment to the premises wiring and telephone network comply with the applicable FCC Part 68 rules and requirements adopted by ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See the installation instructions for details.

The REN is used to determine the maximum number of devices that may be connected to your telephone line. Excessive RENs on a telephone line may result in devices not ringing in response to an incoming call.

In most cases, the sum of all device RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact your local telephone company.

For products approved after July 23, 2001, the REN is part of the identifier with the format **US:AAAEQ##TXXXX**. The digits represented by **##** are the REN without a decimal point. (For example, 03 is a REN of 0.3). For earlier products, the REN is separately shown on the label.

Alarm dialing equipment must be able to seize the telephone line and place a call in an emergency situation. It must be able to do this even if other equipment (telephone, answering system, computer modem, etc.) already has the telephone line in use. To do so, alarm dialing equipment must be connected to a properly installed RJ31X jack that is electrically in series and ahead of all other equipment attached to the same telephone line. If you have any questions concerning these instructions, consult your local telephone company or a qualified installer about installing an RJ31X jack and alarm dialing equipment for you.

If this equipment causes harm to the telephone network, the telephone company may temporarily disconnect your service. The telephone company may notify you in advance, but when advance notice isn't practical, they will notify you as soon as possible and advise you of your right to file a complaint with the FCC.

The telephone company may make changes in their facilities, equipment, operations, or procedures that could affect the operation of the equipment. If they do, they will notify you in advance so you can make the modifications to maintain uninterrupted service.

This equipment may not be used on coin service provided by the telephone company. Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission, or corporation commission for information.

If you experience trouble with this equipment, please contact the company that installed the equipment for service and repair information. If the equipment is causing harm to the telephone network, the telephone company may ask you to disconnect the equipment until the problem is resolved.

**Contact information**

[www.utcfireandsecurity.com](http://www.utcfireandsecurity.com) or [www.interlogix.com](http://www.interlogix.com)

**Customer support**

[www.interlogix.com/customer-support](http://www.interlogix.com/customer-support)

# Content


<b>Introduction</b>	<b>3</b>
Communicating with your system	4
<b>Using the Simon XT security system</b>	<b>6</b>
Panel controls	6
Simon XT features	8
Home security	9
Exit/entry delay	10
Bypassing sensors	12
Alarms	13
Light control (optional)	14
Chimes	14
Latchkey	15
System status	15
Using an offsite phone	16
Using touchpads	16
<b>How your system communicates</b>	<b>19</b>
Status beeps	19
Alarm sirens and lamp modules	19
Panel indicator lights	20
Trouble beeps	20
<b>Programming</b>	<b>23</b>
System menu	23
Code options	23
Menu navigation	23
Top-level menus	25
System programming	27
<b>Testing</b>	<b>35</b>
Testing sensors	35
Testing communication	36
System download	37
<b>Appendix A: Reference information</b>	<b>38</b>
Alarm system limitations	38
Emergency planning	38
Smoke and heat detector locations	39
Your floorplan	40
Delays	43



# Introduction

The Simon XT uses wireless technology to warn your family about intrusion, carbon monoxide and fire. The system communicates with a central monitoring station and sends voice messages to an offsite phone.

Figure 1: Simon XT system

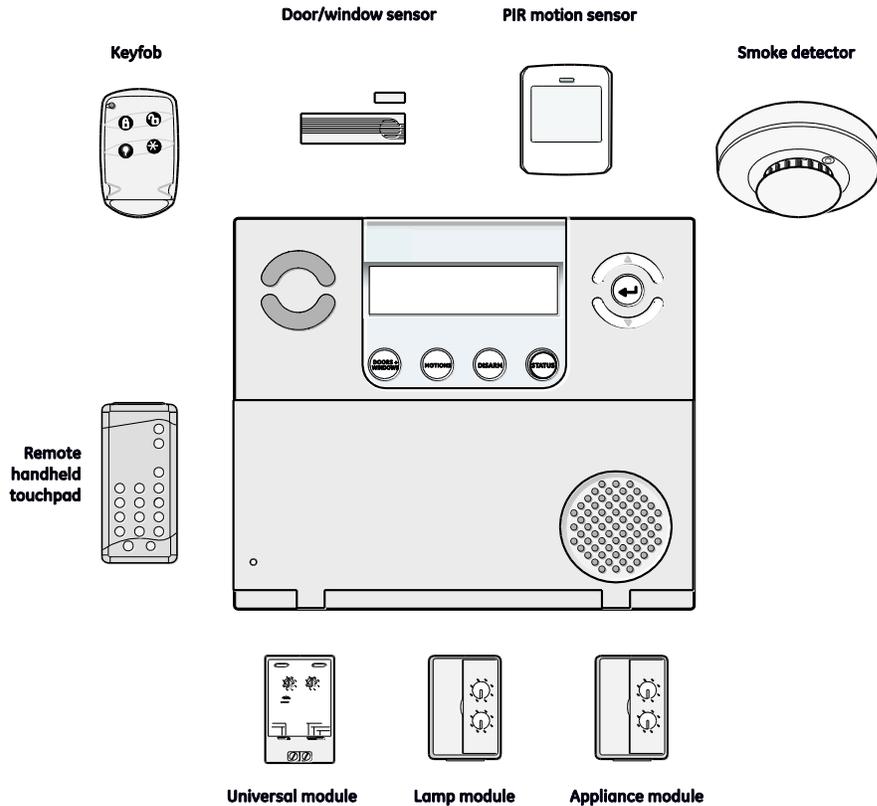

The security system uses sensors that communicate alarms to the control panel using radio waves.

The system is supervised, meaning that the panel checks the status of each sensor to detect problems. If the panel detects trouble, it will notify you with displayed and spoken messages, beeps, and indicator lights on the panel itself.

A Simon XT installation may include any of the devices listed in Table 1 below.

Table 1: Simon XT system components

Component	Type	Description
Control panel		Operates and programs your security system. It communicates to you through displayed and spoken messages. The panel can communicate to a central monitoring station and send voice messages to your offsite phone.

Component	Type	Description
Touchpads	Remote handheld	Controls the security system primarily from within the house.
	Key fob*	This keychain touchpad controls the security system from within or near the outside of your home.
Sensors	Indoor motion	Detects motion in protected indoor area. When motion is detected, the panel may respond by sounding chimes or an alarm.
	Outdoor motion	Detects motion in a protected outdoor area. When motion is detected, the system may respond by sounding chimes or turning on outside lights. These sensors are not used for intrusion detection.
	Door/window	Detects the opening of a door or window.
	Smoke	Detects smoke or a significant rise in temperature. They have a built-in siren that sounds when smoke or a significant rise in temperature is detected.
	Freeze*	Detects furnace failure. If the inside temperature drops below 41°F (5°C), the sensor will notify the panel. The sensor will send a restore signal to the panel when the temperature rises to 50°F (10°C).
	Carbon monoxide*	Detects carbon monoxide. They have a built-in siren that sounds when carbon monoxide is detected.
	Water-resistant personal help button*	A wireless device used for activating police, fire, or auxiliary alarms through your security system.
Modules	Appliance*	Can be programmed to turn appliances or fluorescent lights on and off.
	Lamp*	Can be programmed to turn nonfluorescent lights on and off.
	Universal*	Used for controlling devices other than appliances and lamps. Check with your installer for other applications.

\* Not verified for use by UL

## Communicating with your system

Sending commands or instructing your security system is done through a series of key presses on the panel, touchpads, or a remote telephone.

**Table 2: System communication devices**

Device	Description
Control panel	You can enter commands for your security system through simple key presses on the panel. Depending on how your system is programmed, you may need to enter an access code for certain commands. An access code is a numeric code that allows authorization to operate your security system.
Remote handheld touchpad	This touchpad gives you the option to enter commands from any room in your house. You can enter commands through simple key presses on the touchpad.
Key fob	Key fobs are handy for simple arming and disarming control functions. They are portable and can be carried offsite in a purse or pocket.
Telephone	Touchtone telephones can be used to communicate with your system while you are offsite. Ask your installer if you have this feature.

**Note:** The default master code is 1-2-3-4 when the security system is shipped from the factory. You should change your code after your system is installed.

# Using the Simon XT security system

You can operate the self-contained security system through several different methods:

- Use the front panel buttons to arm/disarm the system when you enter or exit your home and to determine which sensors are active and the system status.
- Use the three fast action keys to communicate with the central monitoring station to report emergency (auxiliary), police, or fire alarms.
- Use a combination of the panel buttons and the display menu to program certain user features. This method is used by your installer to establish your system configuration. (“Menu navigation” on page 23.)

## Panel controls

The self-contained panel provides the user interface for system operation and programming system functions.

Figure 2: Simon XT self-contained panel

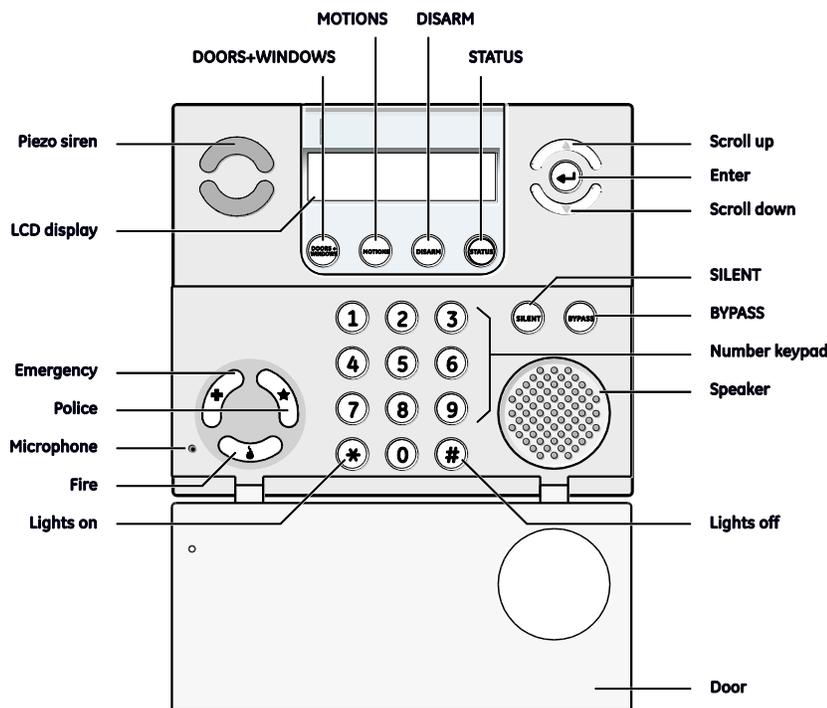


Table 3: Simon XT panel keys and features

Control	Description
Piezo siren	Provides alarm beeps and status beeps.

Control	Description
LCD display	Provides a 2 x 16 character array that displays a variety of phrases and icons.
Scroll up/scroll down arrows	Press to scroll through lists of similar items.
OK	Press to select a particular menu item or commit to panel memory a menu item that has just been programmed.
Doors+Windows	Press to arm perimeter sensors.
Motions	Press to arm interior sensors.
Disarm	Press to turn off intrusion/burglary protection for your system. Only intrusion/burglary sensors are disarmed. Environmental sensors, such as smoke and carbon monoxide detectors, stay active at all times.
Status	Press to determine system status.
Silent	Press to silence exit beeps when arming.
Bypass	Press to bypass a sensor.
Emergency (cross)	Press and hold for 2 seconds (or press twice quickly) to call the central monitoring station and notify them of a <b>nonmedical</b> call for help.
Police (shield)	
Fire (flame)	
Microphone	Use to communicate with the central monitoring station after an alarm.
Numeric keypad	Press the keys (0 through 9, *, #) to enter access codes or other numerical data.
Door	Covers the lower panel.
* (light bulb)	Press to turn lights on. (Contact UTC Fire & Security for required equipment information.)
# (dark light bulb)	Press to turn lights off. (Contact UTC Fire & Security for required equipment information.)
Speaker	Provides voice output and sounds key beeps.

## Standard text display

While the panel is idle, the text displays:

Display line 1	Arming level
Display line 2	HH:MMx (Time) and status icons

Arming level text could be one of the following:

- Subdisarmed
- Disarmed
- Doors+Windows
- Motions

- Doors+Windows and Motions

The phrase “no delay” is appended to the arming level when no entry delay is active. Possible status icons include:

- Chime (solid bell)
- Special chime (outlined bell)
- Light schedules (clock)
- Sensor lights (light bulb)
- Latchkey on (key)

## LEDs

Every key on the front keypad has an LED behind it, except for the scroll arrow keys. There are four status LEDs behind the row of keys below the LCD display. These status LEDs indicate the arming level. There is one status LED behind the OK button. This status LED is lit when there are no open sensors in the system. All other LEDs are controlled as a group and provide backlighting for the keypad for 30 seconds after a key is pressed.

## Simon XT features

Your Simon XT self-contained security system provides the following features:

- Home security
- Entry and exit delays
- Light control
- Emergency
- Bypassing sensors
- Chime
- Latchkey

The Simon XT features provide you with the ability to perform the following functions:

- Arm perimeter (doors and windows) and interior (motion) sensors to indicate intruders.
- Control lights to be turned on and off at a set time or if an intruder is detected.
- Use one button to send quick response alerts to the central monitoring station.
- Access the system from a key fob (similar to the one used for your car).
- Access the system from a remote telephone.
- Disable sensors so you can leave a window open while the system is armed.
- Get an audio alert when a protected door is opened while the system is disarmed.

- Have the system notify you if your children do not arrive at home by a predetermined time.

## Home security

The Simon XT allows you to control which sensors are active at any given time. Table 4 below describes the arming levels that you can set from the control panel.

**Table 4: Arming levels**

Level	Function	Description
0	Subdisarm	If your system includes 24-hour protection sensors, you must subdisarm the panel before accessing these areas to avoid causing an alarm. Environmental sensors (such as smoke or carbon monoxide detectors) stay active at all times.
1	Disarm	In this level, only 24-hour sensors are active. Environmental sensors (such as smoke or carbon monoxide detectors) stay active at all times.
2	Arm door and window sensors (exterior)	This level arms the door and window sensors, while leaving the interior motion sensors disarmed.
3	Arm motion sensors (interior)	This level arms the interior motion sensors, while leaving the exterior door and window sensors disarmed.
4	Arm doors/windows and motion sensors	This level arms all sensors.

### Arming/disarming

Arming a sensor makes it active and allows the panel to generate an alarm when a door or window is opened or when an unauthorized person enters a specific area. Disarming makes the sensor inactive in the system. The current arming level is shown on the panel display and changes in arming level are announced on the speaker.

#### To subdisarm (level 0):

1. Enter the master code while the system is disarmed.

The panel displays and speaks Subdisarmed, the Disarm button blinks, and the panel beeps once.

2. When you finish accessing the temporarily unprotected areas, press Disarm to return to the disarmed level.

#### To disarm (level 1):

1. Press Disarm.

2. Enter your code when the display shows `Enter Code`.

The panel displays and speaks `Disarmed`, the `Disarm` button lights up, and the panel beeps once.

### **To arm doors and windows (level 2):**

1. Ensure that all doors and windows are closed.
2. Press `Doors+Windows`.
3. Enter your code when the display shows `Enter Code`, if a code is required.

The panel displays `Doors + Windows`, speaks `Doors and Windows On`, and the `Doors+Windows` button lights up.

The panel starts an exit delay and sounds exit beeps in groups of two until the exit delay expires.

### **To arm motion sensors (level 3):**

1. Press `Motions`.
2. Enter your code when the display shows `Enter Code`, if a code is required.

The panel displays `Motions`, speaks `Motions On`, and the `Motions` button lights.

The panel starts an exit delay and sounds exit beeps in groups of three until the exit delay expires.

### **To arm doors, windows, and motion sensors (level 4):**

1. Press `Doors+Windows`.
2. Enter your code when the display shows `Enter Code`, if a code is required.
3. While the panel is in the process of arming, press `Motions`.

The panel displays `Doors + Windows & Motions`, speaks `Doors and Windows On`, `Motions On`, and the `Doors+Windows` and `Motions` buttons light up.

The panel starts an exit delay and sounds exit beeps in groups of four until the exit delay expires.

## **Exit/entry delay**

Your Simon XT provides a delay after entering or exiting your home before the system is alarmed. Table 5 on page 11 provides details for the entry and exit delay features.

**Table 5: Entry and exit delay details**

<b>Function</b>	<b>Description</b>
Entry delay	<p>Some active sensors cause immediate alarms when tripped. Other sensors, if enrolled in a delayed response group, start an entry delay that lets you enter the premises and disarm the system. When you enter your home, you will hear beeps during the entry delay. If the system has not been disarmed by the end of the entry delay, an alarm occurs.</p> <p>The entry delay time is programmed by the installer.</p>
No delay	<p>If the system was armed with the no delay feature activated, there will be no entry delay and the alarm will occur immediately.</p>
Exit delay	<p>The exit delay is the amount of time the system gives you to exit the home before the system is armed. During the delay, you can vacate the premises through a delayed response door without causing an alarm. Beeps will sound during the exit delay. The exit delay time is programmed by the installer.</p>
Protest during arming	<p>The system may protest an arming level change if certain abnormal conditions exist. If a sensor that is active in the requested arming level is open, the system sounds protest beeps and automatically bypasses the open sensor (depending on the system configuration).</p>

### **Exit delay**

The exit delay is the amount of time the system gives you to exit the home before the system is armed. This is programmed by the installer. After you arm the system you will hear beeps during the exit delay. See Status beeps on page 20.

### **Silent exit**

The silent exit feature silences the status beeps that accompany the exit delay. See Status beeps on page 20. Press SILENT after you arm the system to silence status beeps. The panel will still beep at the beginning and end of the exit delay.

Enabling silent exit doubles the exit delay time.

### **Entry delay**

The entry delay is the amount of time the system gives you to disarm the system after entering the home. This is programmed by the installer. When you enter your home, you will hear beeps during the entry delay. See Status beeps on page 20.

### **No entry delay**

Use the No Delay feature when you are staying at home, for instance when you are asleep, or when you're away from home and will carry a wireless touchpad that will allow you to disarm the system before opening a protected door. Check with your installer to find out how this option is programmed.

## **Close all doors and windows.**

Press DOORS +WINDOWS twice. If a code is required for arming, enter your code after the first press of the DOORS +WINDOWS button, then press the button again.

The panel displays Doors+ Windows - No Delay and speaks Doors and Windows On, No Entry Delay. The DOORS + WINDOWS light will blink and the exit delay will begin.

To avoid causing an alarm, you must disarm the system with a wireless touchpad before entering your home.

## **Quick exit**

Use the quick exit feature when someone wants to briefly leave while the home is still armed (for instance to get the newspaper). This feature needs to be enabled by your installer. When you press the DISARM button, the display shows Exit Time Is On. This allows a designated exit door to be open for up to two minutes without triggering an alarm.

The designated door may be opened and closed only once. If you close the designated door behind you when you exit, you will have to disarm the system upon reentering. Leave the designated door open while using the quick exit feature.

## **Exit delay extension**

If enabled by your installer, the Exit delay extension feature will recognize when you arm the system, leave your house and then quickly re-enter your house (such as you would if you forgot your car keys.) In such a case Simon XT will restart your exit delay to give you the full exit delay again.

## **Bypassing sensors**

Bypassing a sensor allows you to open the sensor while the system is armed. For example, if your Doors & Windows are armed and you want to open your kitchen window but do not want to disarm the entire system, then you can bypass the kitchen window sensor and then open the kitchen window without causing an alarm. Bypassed sensors are automatically unbypassed when the arming level is changed to a level where the sensor is not active.

## **Bypassing**

1. Press BYPASS and enter the master code.
2. Scroll up/down until you reach the sensor to be bypassed.
3. The display shows, for example, Sn 1 Front Door on the first line.

4. Press Enter to bypass (deactivate) the sensor.
5. When a sensor is bypassed, the panel displays Bypassed on the second line.

### **Unbypassing**

1. Press BYPASS and enter the master code.
2. Scroll up/down to the sensor to be unbypassed. The sensor must be currently bypassed.
3. Press Enter to unbypass (reactivate) the sensor.
4. The panel removes the word Bypassed from the second line of the display.

## **Alarms**

The system provides a series of alarms that indicate an unusual occurrence. When an alarm is active, the panel displays:

Alarm Alarm Alarm  
Press Status

Alarms are canceled by entering a valid master or user code. After alarms are canceled, the system will be disarmed.

### **Canceling and preventing accidental alarms**

One of the biggest concerns you might have regarding your security system is causing an accidental alarm. Most accidental alarms occur when leaving the residence after arming the system or before disarming the system upon your return.

There is a communicator delay (dialer delay) of 30 seconds programmed into this panel. The panel will delay 30 seconds before dialing the central monitoring station remote phone to send reports. You can have your installer program this delay time between 0 and 254 seconds. To cancel an accidental alarm before the programmed dialer delay time expires, enter your access code. The system will display Alarm Cancel and sound beeps.

### **Guidelines for preventing accidental alarms**

Use the following guidelines to prevent accidental alarms.

- Close doors and windows before you leave your house.
- Gather your belongings, so you can exit immediately after arming the system.
- Always enter and exit within the programmed delay times.
- Make sure you leave through a door that has a delay time set for it.
- Disarm your system immediately upon returning home.

- Be aware of the devices in your security system and learn how each one operates.
- If you have pets, ask your installer if you need pet lenses in your motion detectors.
- Check the location of your smoke detectors. Smoke detectors near bathrooms and kitchens can be tripped by steam and smoke from cooking.
- Make a note of the display, system beeps, and indicator lights that indicate the current system status.

## Light control (optional)

Simon XT lets you control lights and appliances using lamp, appliance, or universal modules. You can:

- Turn lights with unit numbers 1 to 8 on or off manually or at a specific time.
- Turn on lights when a sensor is tripped. You can program lockout times when sensor-activated lights won't be active.

To turn on all of the lights that are controlled by lamp modules, press the \* button twice. The panel display will show All Lights On. To turn off all lights that are controlled by lamp modules, press the # button twice. The panel display will show All Lights Off. To turn on or off individual lights:

- To turn on a light with unit number N (1 to 8), press the \* button, then <N>. The panel displays and speaks Light <N> On.
- To turn off a light with unit number N (1 to 8), press the # button, then <N>. The panel displays and speaks Light <N> Off.

This feature is not verified for use by UL.

## Chimes

Use the Chime feature to signal when a protected door is opened while the system is disarmed. The panel chimes twice when a chime sensor is tripped, if the chime mode is enabled. This feature allows you to be notified when family members are going in and out of your home. The Chime and Special chime features are turned on or off in the system menu. See Chime on page 29 and Special chime on page 30.

**Note:** If there are no chime sensors in your system, the Chime option will not appear in the System menu.

### Voice chime

Your installer may have programmed the system to speak the sensor name or make a custom chime sound when a chime sensor is tripped. The chime sound, if programmed, will be played in place of the standard chime beeps.

## Special chime

Special chime allows you to install motion sensors in a patio or at the front door, and be notified when someone is approaching those areas. These motion sensors are not used for intrusion protection. The panel will chime three times, if the special chime mode is enabled.

**Note:** If there are no special chime sensors in your system, the Special chime option will not appear in the System menu.

## Latchkey

Use the latchkey feature to notify you, via a remote phone, if a family member does not arrive home at a predetermined time and disarm the system. When this feature is active, a latchkey alarm is reported if the premises are not disarmed by the programmed latchkey time. For example, if you set the Latchkey time for 3:00 p.m. and the system is not disarmed by that time a message is sent to your remote phone. The latchkey feature can be activated during arming if a latchkey time is programmed.

To activate the latchkey feature:

1. Press MOTIONS twice. If a code is required, enter your code after the first press of the MOTIONS button, then press MOTIONS a second time.
2. The panel MOTIONS light will blink and the exit delay will begin.

**Note:** This feature is not verified for use by UL.

## System status

Press STATUS (no code is required) to cause the system to display and speak the following types of information:

- Alarm conditions
- Alarm history
- Trouble conditions
- Open sensors
- Bypassed sensors

The STATUS button blinks when an active alarm exists. The STATUS button is lit when an abnormal condition such as a trouble or open sensor exists in the system.

You can clear certain status entries from the system (such as old alarm history) by pressing DISARM after checking the status.

## Using an offsite phone

If enabled by the installer, you can control your Simon XT panel remotely from an offsite phone. The panel answers a phone call according to the dialing method programmed by your installer.

After a certain combination of rings and pauses, the panel will answer the call with the voice prompt Enter your code. You must enter the correct code to gain access.

If you are interacting with your panel and the panel hangs up on you, the system is calling in a report to the central monitoring station or remote phone due to an action by you or someone at the security system site. The actions listed in Table 6 below may be performed from an offsite phone.

**Table 6: Phone controls**

Action	Phone key presses	Comments
Disarm	1	System not already disarmed
Subdisarm	1	Must have used the master code to gain access; system was disarmed
Arm doors and windows	2	Press 2 again to activate the no delay feature
Arm motion sensors	3	Press 3 again to activate the latchkey feature
Arm doors, windows, and motion sensors	2 3	
Check status	0	
Turn light on	* -<unit_num>.	N = 1-8, unit number
Turn light off	# -<unit_num>.	N = 1-8, unit number
Turn all lights on	* _ *	
Turn all lights off	# - #	
Hang up	9	

**Note:** This feature is not verified for use by UL.

## Using touchpads

Touchpads are used to control the security system from any location within or near your home.


Touchpads such as the remote handheld touchpad and the keyfob, are not verified for use by UL.

## Remote handheld touchpad

Interfacing with the system using a remote handheld touchpad is similar to using the panel.

Figure 3: Remote handheld touchpad

---

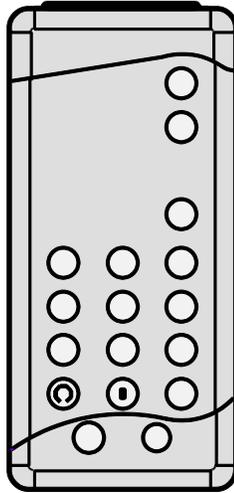

## Keyfob

If your installer programmed the keyfob with no entry delay, and you armed the system with the keyfob, you must disarm your system before entering the home to avoid causing an alarm.

**Caution:** To avoid causing false alarms, check with your installer on how your touchpad options are programmed.

---

Figure 4: Keyfob keychain touchpad

---



**Note:** For any key press on the keyfob, hold the button until the indicator light blinks.

If your installer programmed your system for remote touchpad arming, you must enter your home to start the entry delay before you can use your keyfob to disarm the system.

**Note:** Panic alarms need to be silenced from the panel, a remote handheld touchpad, or another keyfob. They cannot be silenced from the same keyfob that activated the alarm.

**Table 7: Key fob button operation**

<b>Task</b>	<b>Instructions</b>
Arm doors and windows.	Press the Lock button once.
Arm doors, windows, and motion sensors.	Press the Lock button twice.
Arm doors, windows, and motion sensors, and to activate the latchkey option.	Press the Lock button three times.
Send a panic (intrusion, silent, or nonmedical emergency) alarm to the central monitoring station.	Press the Lock and Unlock buttons simultaneously for 3 seconds.  (Check with your installer to find out how the key fob panic buttons will operate.)
Can be programmed to control a device connected to a universal module.	Press the Star button once.
Can be programmed to control a device connected to a lamp module. Press once to turn on all lights on lamp module. Press again to turn off all lights on lamp module turn off.	Press the Light button once.
Disarm your security system	Press the Unlock button once.

# How your system communicates

Your system responds to you through the use of display and voice messages, status beeps, alarms, and panel indicator lights.

## Status beeps

The panel sounds status beeps to alert you to various system events and conditions.

**Note:** You may receive a different number of status beeps if you press the buttons quickly

**Table 8: Status beeps**

Activity	Beep response
Doors+Windows	Exit delay and entry delay beeps sound two times every 5 seconds and two times per second during the last 10 seconds. If silent exit is used, the exit delay beeps will only sound twice when you arm and twice when the exit delay expires.
Motions	Exit delay and entry delay beeps sound three times every 5 seconds and three times per second during the last 10 seconds. If silent exit is used, the exit delay beeps will only sound three times when you arm and three times when the exit delay expires.
Doors+Windows and Motions	Exit delay and entry delay beeps sound four times every 5 seconds and four times per second during the last 10 seconds. If silent exit is used, the exit delay beeps will only sound four times when you arm and four times when the exit delay expires.
Disarm	One beep.
Chime	Two beeps.
Special chime	Three beeps.
Trouble beeps	Six beeps every minute. Press Status to stop beeps for 4 hours.
No activity beeps*	Twenty beeps every minute for 5 minutes (feature must be programmed by the installer).

\* This feature is not verified for use by UL.

## Alarm sirens and lamp modules

Exterior and interior sirens make three different alarm sounds on the premises, each indicating a different type of alarm. Sirens are programmed by the installer to time out and stop sounding after a specified time.

Use Table 9 **on page 20** to understand the siren sounds used by the security system.

**Table 9: Siren sounds**

Function	Fire	Intrusion	Emergency
Interior and panel siren*	Temporal 3	Steady	Fast on/off
Interior and panel siren*	Temporal 3	Steady	Fast on/off
Interior and panel siren	Temporal 3	Steady	Fast on/off
Exterior siren	Temporal 3	Steady	

\* This feature is not verified for use by UL.

**Note:** Temporal 3 refers to a continuous pattern of three siren pulses, then off for 1.5 seconds, three siren pulses, then off for 1.5 seconds.

## Panel indicator lights

Use Table 10 **below** to understand the panel indicator lights.

**Table 10: Indicator light**

Button	When button light is on	When button flashes
Doors+Windows	Doors and windows armed	Doors and window armed and no entry delay on
Motions	Motions armed	Motion sensors armed and latchkey on
Disarm	System disarmed	System subdisarmed
Status	System trouble, open sensor, or bypassed sensor	System in alarm
OK	There are no open sensors	
Chime (solid bell)	Door will cause chime	
Special chime (outlined bell)	Motion will cause chime	
Light schedules (clock)	Time-activated lights feature enabled	
Sensor lights (light bulb)	Sensor-activated lights feature enabled	
Latchkey on (key)	Latchkey feature enabled	

## Trouble beeps

Your security system is able to automatically test itself for:

- Power failures
- Low batteries
- Nonworking sensors

- Communication troubles with the central monitoring station

When your security system detects one of the problems above, six rapid beeps sound every minute until the trouble condition is corrected. To stop the trouble beeps, press STATUS or arm/disarm the system while the trouble condition exists. Trouble beeps will resume four hours later unless the trouble condition is corrected.

The following list explains the trouble beep conditions:

### **AC power failure**

This condition (if programmed by installer) occurs if your security system has been accidentally unplugged or if there has been an AC power outage. Any status lights go out immediately, and trouble beeps start after five minutes. If you press any button, the display will light and pressing STATUS will show the AC failure. If AC power is not restored within a programmed period of time (5 to 254 minutes) the system will call the central monitoring station. The backup battery, if fully charged, will last for 18 to 24 hours—depending on the load applied to the panel—with no AC power.

In a UL installation, a new, fully charged backup battery will last 24 hours with the panel in normal standby condition and still sound an alarm.

### **System battery failure**

This condition occurs if the emergency backup battery has failed. Trouble beeps will start. Press the STATUS button and the display will show **System Low Battery**. If your AC power is not working, your security system will shut down once the battery has failed. If the condition does not clear after AC power has been restored and 24 hours have passed, call your security system dealer.

### **Restoration of power**

This condition occurs after a complete loss of power (AC and battery). When power is restored, the panel will return to the arming state with the same zones bypassed it had prior to losing power.

### **Sensor failure**

This condition occurs if a sensor is not communicating with the panel. Trouble beeps will start and the STATUS button will light. Press the STATUS button and the display will show what sensors have failed. Perform sensor tests. You may need to call your security system dealer if the problem continues.

### **Sensor low battery**

This condition occurs if a system sensor has a low battery. The sensor may still be communicating with the panel. Trouble beeps will start and the STATUS button will light. Press the STATUS button and the display will show what

sensors have a low battery. You may need to call your security system dealer to resolve this problem. Some sensor batteries can be replaced by the homeowner.

### **Fail-to-communicate**

This condition occurs if your security system cannot communicate to the central monitoring station. Your system will try to report to the central monitoring station eight times before it tells you there is a fail-to-communicate problem. Trouble beeps will start and the STATUS button will light. Press the STATUS button and the display will show *Comm Test Fail* or *Comm Failure*. You may need to call your security system dealer if the problem continues.

### **Sensor open**

This condition occurs if a door or window is open or a system sensor has been disturbed and not reset properly. For example, a door/window sensor magnet may have been removed from the sensor. Your system will indicate this condition to you by causing the STATUS button to light. When you press the STATUS button, the display shows, for example, ***Sn 1 Front Door Open***. Correct the problem by resetting the sensor. If this condition continues, call your security system dealer.

### **Sensor tampered**

This condition occurs when a sensor is physically tampered with, for example, the cover is taken off of one of the sensors. If the system is armed an alarm will occur. Your system will indicate this condition to you by causing the STATUS button to light. Trouble beeps will start. Press the STATUS button and the display shows *Sn # Name Tampered*. Correct the problem by resetting the sensor. If this condition continues, call your security system dealer.

### **RF jam detected**

The panel receiver may be experiencing some interference. The system will call to notify the central monitoring station about this problem.

### **Clearing status**

Some types of status conditions, such as the alarm history, must be cleared manually. To clear system status, press the STATUS button, read and/or listen to the status messages, then press DISARM. If the trouble condition was a low system battery, perform a sensor test. The STATUS light should turn off if all trouble conditions have been corrected.

# Programming

Your Simon XT security system allows you to program certain user options. These options are accessed through a system menu.

## System menu

To enter the system menu, press one of the scroll buttons or the OK button in the upper right of the panel.

Press Status to exit a menu or option edit mode and navigate up one level. Pressing Status while in the top menu level exits the system menu. The panel automatically exits the system menu after a few seconds of inactivity if no access code has been entered. After an access code has been entered to access a code-protected area of the system menu, the timeout is 30 seconds (4 minutes while performing a sensor test).

## Code options

The Simon XT security system provides a system of codes to be entered when a certain level of authority is required to perform an action. These codes allow you to activate system options, customize panel operations, and generate a silent alarm. The default code is based on the code length (3, 4, 5, or 6-digit code) determined at installation. The code types are listed in Table 11 below.

**Table 11: Code types**

Code	Description
Master code	The master code is the main code used for panel operations. The default code will be 123, 1234, 12345, or 123456 depending on the value set by the installer for code length.
User codes 1 through 8	These eight codes are supplemental user codes. You can use these codes for panel operations such as disarming, but not programming. These codes can be any 3, 4, 5, or 6-digits, depending on the code length.
Duress code	Use the duress code to generate a silent duress alarm while disarming.

**Note:** Any combination of invalid codes in excess of 40 key presses (such as fourteen invalid three-digit codes) will cause a system access alarm. The alarm locks all touchpads, except key fobs, for 90 seconds.

## Menu navigation

Each menu contains a list of options and/or submenus. Press the scroll buttons to navigate the list of options and submenus in that menu. Pressing OK after

navigating to an option selects that option for editing and flashes the current value. Pressing OK after navigating to a submenu enters that submenu, making a new list of options accessible. Pressing Status exits a menu and goes to the next higher level. When accessing the System Programming or System Tests menu, the panel prompts you to enter an access code. To continue, enter your master code, and then press OK.

To program an option, first navigate to that option until it is displayed, and then press OK. The option value will start flashing, indicating that it is ready to be changed. Use the scroll keys or enter a numerical value to change the option, and then press OK.

**Table 12: Menu structure**

Set Clock (system time)		
Set Date		
Chime		
Special Chime		
System Tests	Sensor Test	
	Communication Test	
	System Download	
System Programming	Access Codes	Dealer Code
		Master Code
		User Codes 1 to 8
		Duress Code
	Security	Downloader Enable
	Phone Numbers	Phone Number 4
	Timers	Latchkey Time
	Siren Options	Panel Piezo Beeps
		Panel Voice
		Panel Piezo Alarms
		Status Beep Volume
		Speaker Volume
	System Tests	Sensor Test
Communication Test		
Initiate Download Call		
Revision		
Contrast		

## Top-level menus

This section explains the top-level menus, with the exception of system programming, which makes up the bulk of the menus and can be found in its own section, System programming on page 31.

### Set clock

If the panel loses both AC and battery power, then upon restoring power the system time will default to midnight and blink, indicating it has not been set correctly. Your installer can set your system time to display in either 12-hour or 24-hour format.

Time of day format is HH:MMx

Where:

HH = 01 to 12 (12-hour format) or 00-23 (24-hour format)

MM = 00 to 59

x = a or p (12-hour format) or none (24-hour format)

To reset the clock:

1. Scroll up/down until the display shows Set Clock.
2. Press Enter.
3. The display shows Enter Code.
4. Enter your master code with numeric keys. Press Enter.
5. Press Enter again. The display now flashes the hours.
6. Scroll up/down to set the hours.
7. Press the Enter key to accept. The display now flashes the minutes.
8. Scroll up/down to set the minutes.
9. Press the Enter key to accept. The display is now flashing the AM/PM.
10. Scroll up/down to set the AM/PM.
11. Press Enter to accept. The display now shows the current time, and stops flashing.
12. Press STATUS twice to exit.

### Light schedules

Simon XT will automatically turn certain lights on or off according to light schedules you can define in menu item System programming / Light control / Light schedules. See Light control (optional) on page 14.

To enable or disable scheduled lights:

1. Scroll up/down until the display reads Light Schedules.
2. Press Enter. The current setting will flash.
3. Scroll up/down to toggle scheduled lights On/Off.
4. Press Enter. The setting will stop flashing.
5. Press STATUS to exit.

A clock icon appears in the display when scheduled lights are enabled.

**Note:** This feature is not verified for use by UL. This menu option will not appear if no light schedules are defined.

### Sensor lights

Simon XT automatically turns certain lights on or off when certain sensors are tripped. For example, you can set a basement light to turn on when the door to the basement is opened. You can associate sensors with lights in menu item System programming / Light control / Sensor light. See Light control (optional) on page 14.

To enable or disable sensor-activated lights:

1. Scroll up/down until the display shows Sensor Lights.
2. Press Enter. The current setting will flash.
3. Scroll up/down to toggle the sensor-activated lights On/Off.
4. Press Enter. The setting will stop flashing.
5. Press STATUS to exit.

A light-bulb icon will appear in the display when Sensor lights are enabled.

**Note:** This feature is not verified for use by UL. This menu option will not appear if no sensor lights have been defined.

### Chime

To enable or disable the Chime feature:

1. Scroll up/down until the display shows Chime.
2. Press Enter. The current setting will flash.
3. Scroll up/down to toggle Chime on/off.
4. Press Enter. The setting will stop flashing.
5. Press STATUS to exit.

A solid bell icon will appear in the display when Chime is enabled.

**Note:** This menu option will not appear if no chime sensors are in your system

## Special chime

To enable or disable the Special chime feature:

1. Scroll up/down until the display shows Chime.
2. Press Enter. The current setting will flash.
3. Scroll up/down to toggle Special chime on/off.
4. Press Enter. The setting will stop flashing.
5. Press STATUS to exit.

An outlined bell icon will appear in the display when Special chime is enabled.

**Note:** This menu will not appear if Special chime sensors are not in your system.

## System tests

This menu lets you run sensor and communication tests, and initiate a phone call from the panel to the Enterprise Downloader. For more information, see “Testing” on page 35.

This menu item is a read-only display of the system’s firmware version. Press Status to exit.

## Contrast

To adjust the Contrast of the display, do the following:

1. Scroll up/down to Contrast.
2. Press Enter.
3. Scroll up/down to increase and decrease the contrast setting. (There are eleven contrast levels.)
4. Press STATUS to save the setting and exit.

**Note:** Changes in contrast are more noticeable when not looking at the display straight on.

## System programming

To enter system programming mode, do the following:

1. Enter the system menu.
2. Scroll up/down to System programming, then press Enter.
3. The panel displays Enter code.
4. Enter your master code, then press Enter.

At this point, you are in the System programming submenu. At this level, the following items are accessible:

- Access codes
- Security
- Phone #s
- Timers
- Siren options
- Light control
- System tests

The sections below describe the options that you can program in the System programming menu.

### **Access codes**

There are three types of access codes: master, user, and duress.

#### *Master code*

The master code is your most powerful code and can be used for all user operations including programming. To change the master code, do the following:

1. Enter the System programming menu.
2. Scroll up/down to Access codes, then press Enter.
3. Scroll up/down to Master code, then press Enter.
4. The current value of the code now flashes.
5. Enter a new code (use correct length), then press Enter.
6. Press Status repeatedly to exit.

The initial value of the master code is 123, 1234, 12345, or 123456, depending on the installer-programmed access code length.

#### *User codes 1 to 8*

There are eight user codes, which can be used for many user operations, but not subdisarming, programming, or bypassing sensors.

To change a user code, do the following:

1. Enter the System programming menu.
2. Scroll up/down to Access codes, then press Enter.
3. Scroll up/down to the user code you want to change, then press Enter.
4. The current value of the code now flashes.
5. Enter a new code (use correct length), then press Enter.
6. Press Status repeatedly to exit.

Initially, all user codes are blank. A user code can be deleted by pressing Disarm while the code is being changed.

### *Duress code*

The duress code, when used in place of another user code, generates a silent duress alarm which is reported to the central monitoring station.

To change the duress code:

1. Enter the System programming menu.
2. Scroll up/down to Access codes, then press Enter.
3. Scroll up/down to Duress code, then press Enter.
4. The current value of the code now flashes.
5. Enter a new code (use correct length), then press Enter.
6. Press Status repeatedly to exit.

Initially, the duress code is blank. The duress code can be deleted by pressing Disarm while the code is being changed.

### **Security**

The Security menu contains the Download Enable option. This option determines whether your dealer can access the system remotely.

To program the Download enable option:

1. Enter the System programming menu.
2. Scroll up/down to Security, then press Enter.
3. Scroll up/down to Download enable, then press Enter.
4. The current value of this option now flashes On/off.
5. Scroll up/down to the desired value, then press Enter.
6. Press STATUS repeatedly to exit.

### **Phone numbers**

Phone #4 is the only system phone number that you can change. Therefore, it is often used for voice reporting of alarms to your phone, if it was programmed for this purpose by the installer.

To change Phone #4:

1. Enter the System programming menu.
2. Scroll up/down to Phone #s, then press Enter.
3. Scroll up/down to Phone #4, then press Enter.
4. The first digit of the current value of this option now flashes (this may take up both lines on the display).

5. Change each digit of the phone number by scrolling or entering a numerical value, then move to the next digit by pressing Enter.
6. When done, press Enter again to save the new phone number.
7. Press STATUS repeatedly to exit.

The phone number can be deleted by pressing the DISARM button while changing a digit.

## Timers

The Latchkey Time option is the only timer setting available to you. The Latchkey time is the time of day by which the panel must be disarmed to avoid triggering a latchkey alarm, if the Latchkey time option is enabled during arming.

To change the Latchkey time:

1. Enter the System programming menu.
2. Scroll up/down to Timers, then press Enter.
3. Scroll up/down to Latchkey time, then press Enter.
4. The HH (hours) part of the time now flashes.
5. Program the hour value by scrolling or entering a numerical value, then press Enter.
6. The MM (minutes) part of the time now flashes.
7. Program the minute value by scrolling or entering a numerical value, then press Enter.
8. If you are using 12-hour clock format, the a or p (AM/PM) part of the time now flashes.
9. Select a or p by scrolling, then press Enter.
10. Press STATUS repeatedly to exit.

## Siren options

The panel has two built-in sound sources, a piezo siren and a speaker. The piezo siren makes alarm beeps and status beeps. Fire and intrusion alarm beeps are always played at high volume, while the volume of status beeps (such as trouble or chime beeps, entry and exit delay beeps, or auxiliary alarm beeps) is programmable. The speaker emits the panel's voice and also sounds beeps when a key is pressed. Its volume is also programmable.

The siren and built-in speaker options consist of the following:

### *Panel piezo beeps*

Panel piezo beeps (status beeps sounded on the siren). This option determines whether or not the panel sounds nonalarm beeps.

To program Piezo beeps, do the following:

1. Enter the System programming menu.
2. Scroll up/down to Siren options, then press Enter.
3. Scroll up/down to Piezo beeps, then press Enter.
4. The current value of this option now flashes (On or Off).
5. Scroll up/down to the desired value, then press Enter.
6. Press STATUS repeatedly to exit.

#### *Panel voice*

Panel voice (spoken phrases on the speaker) and key press sounds from the speaker heard while controlling the system). This option determines whether or not the panel speaks status messages and arming level changes.

To program Panel voice, do the following:

1. Enter the System programming menu.
2. Scroll up/down to Siren options, then press Enter.
3. Scroll up/down to Panel voice, then press Enter.
4. The current value of this option now flashes (On or Off).
5. Scroll up/down to the desired value, then press Enter.
6. Press STATUS repeatedly to exit.

#### *Panel piezo alarms*

Loud alarms on the siren. This option determines whether or not the panel sounds alarm beeps.

To program Panel piezo alarm, do the following:

1. Enter the System programming menu.
2. Scroll up/down to Siren options, then press Enter.
3. Scroll up/down to Panel piezo alarm, then press Enter.
4. The current value of this option now flashes (On or Off).
5. Scroll up/down to the desired value, then press Enter.
6. Press STATUS repeatedly to exit.

#### *Status beep volume*

This option sets the sound volume of nonalarm beeps. The numerical range is 1 to 10. The default value is 7.

To program Status beep vol, do the following:

1. Enter the System programming menu.
2. Scroll up/down to Siren options, then press Enter.
3. Scroll up/down to Status beep vol, then press Enter.
4. The current value of this option now flashes (1 to 10).
5. Scroll up/down to the desired value, then press Enter.
6. Press STATUS repeatedly to exit.

### *Speaker volume*

This option sets the sound volume of the panel speaker for key presses and alarm sounds. The numerical range is 1 to 8. The default value is 8.

To program Speaker volume, do the following:

1. Enter the System programming menu.
2. Scroll up/down to Siren options, then press Enter.
3. Scroll up/down to Speaker volume, then press Enter.
4. The current value of this option now flashes (1 to 8).
5. Scroll up/down to the desired value, then press Enter.
6. Press STATUS repeatedly to exit.

### **Light control**

You can control certain lights by using X10 lamp, appliance, or universal modules. As set up by the installer, these modules have unit numbers from 1 to 8 and are set to the same housecode. These lights can be turned on for certain arming operations, when a sensor is tripped or based on a time schedule. Light control includes:

#### *Set entry lights*

In this menu, each unit number can be set up as an entry light. These lights flash the arming level when the system is armed. For example, an entry light flashes twice when the system is armed to Level 2 (Doors+Windows).

To Set entry lights, do the following:

1. Enter the System programming menu.
2. Scroll up/down to Light control, then press Enter.
3. Scroll up/down to Set entry lights, then press Enter.
4. Scroll up/down to the unit number you want to set up, then press Enter.
5. The current option value flashes (On or Off).
6. Scroll up/down to the desired value, then press Enter.

7. Press STATUS repeatedly to exit.

### *Sensor lights*

In this menu, each sensor can be tied to a unit number. For example, a light in a room can be set up to turn on when a motion sensor in that room is tripped.

To set up Sensor lights, do the following:

1. Enter the System programming menu.
2. Scroll up/down to Light control, then press Enter.
3. Scroll up/down to Light schedules, then press Enter.
4. Scroll up/down to the desired light schedule (as defined by the unit number), then press Enter.
5. The current option value now flashes.
6. Enter the desired start time by entering the hours, minutes, and AM/PM (press Enter after programming each part).
7. Enter the desired end time by entering the hours, minutes, and AM/PM (press Enter after programming each part).
8. Press STATUS repeatedly to exit.

### *Light schedules*

In this menu, a light schedule can be programmed for each unit number (1 to 8).

To program Light schedules, do the following:

1. Enter the System programming menu.
2. Scroll up/down to Light control, then press Enter.
3. Scroll up/down to Light schedules, then press Enter.
4. Scroll up/down to the desired light schedule (as defined by the unit number), then press Enter.
5. The current option value now flashes.
6. Enter the desired start time by entering the hours, minutes, and AM/PM (press Enter after programming each part).
7. Enter the desired end time by entering the hours, minutes, and AM/PM (press Enter after programming each part).
8. Press STATUS repeatedly to exit.

### *Housecode*

To change the Housecode, do the following:

1. Enter the System programming menu.

2. Scroll up/down to Light control, then press Enter.
3. Scroll up/down to Housecode, then press Enter.
4. The current option value (A to O) now flashes.
5. Scroll up/down to the desired value, then press Enter.
6. Press STATUS repeatedly to exit.

#### *Sensor-activated light lockout time*

Each light (unit numbers 1 to 8) that has been tied to a sensor can be programmed not to turn on during a certain time of day.

To program the Lock interval, do the following:

1. Enter the System programming menu.
2. Scroll up/down to Light control, then press Enter.
3. Scroll up/down to Lock interval, then press Enter.
4. Scroll up/down to the unit number for which you want to program a lockout time, then press Enter.
5. The current option value now flashes.
6. Program the start and end times (see Light schedules on page 36).
7. Press STATUS repeatedly to exit.

# Testing

This chapter provides a set of tests to ensure proper operation of your Simon XT self-contained security system. We recommended you test your system weekly.

## Testing sensors

You can test sensors one at a time to make sure they are sending strong signals to the panel. You should test the security system at least once a week.

To perform the **Sensor Test**:

1. Scroll to **System Tests**.
2. Press Enter. The display shows **Enter Code**.
3. Enter your master code with the numbered keys.
4. Press Enter to accept the master code. The display shows **Sensor Test**.
5. Press Enter. The display shows, for example, **Trip Sn 1 Front Door** and automatically displays the list of sensors to be tested. The panel sounds six beeps once a minute while in **Sensor Test** mode. See Table 13 **below**.

When you trip a sensor the display shows, for example, **Sn 1 Packets = 8 Front Door**. You may trip the sensors in any order. As each sensor is heard from, it is removed from the list of sensors to be tested. After all sensors have been successfully tested, the display shows **Sn Test Complete, Press Status**. To terminate the sensor test:

1. Press STATUS. The display shows **Sensor Test Ok**.
2. After a few seconds the display shows **Sensor Test**.
3. Press STATUS repeatedly to exit.

If any of the sensors did not test successfully and you want to terminate the test, press STATUS. The panel display will show **Sensor Test Fail or Aborted**. The display then shows **Sensor Test**. Press STATUS once to exit the system test. If a sensor test fails, call your security dealer.

**Table 13: How to trip devices for sensor test**

Device	To trip device
Door/window sensor	Open the secured door or window.
Freeze sensor*	Apply ice to the sensor. Do not allow the sensor to get wet.
Water sensor*	Press a wet rag or wet finger over both of the round, gold-plated terminals on the underside of the sensor.
Carbon monoxide sensor*	Unplug the CO alarm. Plug it back in and press the test/reset button until the unit beeps eight times.

Device	To trip device
Glassbreak sensor*	Trip with appropriate glassbreak tester.
Motion sensor	Avoid the motion sensor's view for 5 minutes, and then enter its view.
Shock sensor*	Tap the glass twice, away from the sensor. Wait at least 30 seconds before testing again.
Smoke sensor	Press and hold the test button until the system sounds transmission beeps.
Wireless panic button*	Press and hold the appropriate button for 3 seconds.
Key fob*	Press and hold Lock and Unlock simultaneously for 3 seconds.
Remote handheld touchpad	Press and hold the two Emergency buttons simultaneously for 3 seconds.

\* Not investigated for use by UL

## Testing communication

Test communication between your system and the central monitoring station or a voice report destination at least once per week to make sure you have the proper telephone connection.

**Note:** The system must be in disarm mode.

To perform a communication test:

1. Scroll to **System Tests**.
2. Press Enter. The display shows **Enter Code**.
3. Enter the master code.
4. Press Enter to accept the master code. The display shows **Comm Test**.
5. Scroll to **Comm Test**.
6. Press Enter. The display shows **Comm Test is On**.
7. After the communication test is successful, the display shows **Comm Test Ok**.
8. Press STATUS repeatedly to exit.

**Note:** If your system is not connected to a central monitoring station and you do not have a voice report destination programmed, you won't be able to perform the communication test.

If the communication test is successful, the system displays *Comm Test Ok*. If the test is unsuccessful, the STATUS button will light and within ten minutes the panel will display *Comm Failure*. If a communication test fails, call your security system dealer.

## System download

You can initiate a download call to program your system with the settings specified by your installer.

To initiate a download, do the following:

1. Scroll up/down till the display shows *System tests*.
2. Press Enter. The display shows *Enter code*.
3. Enter your master code with numeric keys.
4. Press Enter. The display now shows *Sensor test*.
5. Scroll up/down till the display shows *System download*.
6. Press Enter. The display shows *Download in progress*.
7. Wait while your system calls the download center.
8. Display will show the result of the download. If the display shows *Download Fail*, contact your dealer.
9. Press STATUS twice to exit.

**Note:** Use this feature only when instructed by your installer or dealer.

# Appendix A: Reference information

This appendix provides a list of system limitations, emergency planning, floorplan, and a quick reference command table.

## Alarm system limitations

Not even the most advanced alarm system can guarantee protection against burglary, fire, or environmental problems. All alarm systems are subject to possible compromise or failure-to-warn for a variety of reasons.

- If sirens are not placed within hearing range of persons sleeping, in remote parts of the premises, or if they are placed behind doors or other obstacles.
- If intruders gain access through unprotected points of entry or areas where sensors have been bypassed.
- If intruders have the technical means of bypassing, jamming, or disconnecting all or part of the system.
- If power to sensors is inadequate or disconnected.
- If freeze or any environmental sensors are not located in areas where the appropriate condition can be detected.
- If smoke does not reach a smoke sensor. For example, smoke sensors cannot detect smoke in chimneys, walls, roofs, or areas blocked by a closed door. Sensors may not detect smoke in other levels of the building. Sensors may not warn in time when fires are caused by smoking in bed, explosions, improper storage of flammables, overloaded electrical circuits, or other hazardous conditions.
- If telephone lines are out of service.

Inadequate maintenance is the most common cause of alarm failure. Therefore, test your system at least once per week to be sure sensors, sirens, and phone communication are all working correctly.

Although having an alarm system may make you eligible for reduced insurance premiums, the system is no substitute for insurance.

---

**WARNING:** Security system devices cannot compensate you for loss of life or property.

---

## Emergency planning

Since an emergency is always unexpected, you should develop plans to help prepare for a variety of emergency situations. Periodically discuss and rehearse emergency plans to include the following:

- Understand how to use your security system.

- Know the normal state of doors and windows: open, closed, or locked.
- Escape fast! (Do not stop to pack.)
- Use a different escape route if closed doors feel hot to the touch.
- Crawl and hold your breath as much as possible to help reduce smoke inhalation during your escape.
- Meet at a designated outdoor location.
- Emphasize that no one should return to the premises if there is a fire.
- Notify the fire department from a neighbor's phone.
- Emphasize that no one should enter the premises if they hear sirens in the house.
- If you arrive at the premises and hear sirens, do not enter. Call for emergency assistance from a neighbor's phone.


## Smoke and heat detector locations

Selecting a suitable location is critical to the operation of smoke alarms. Figure 5 **on page 40** shows some typical floorplans with recommended smoke and heat detector locations. Use these location guidelines to optimize performance and reduce the chance of false alarms:

- Before mounting alarms, program (learn) them into memory and do a sensor test from the alarm's intended location to ensure good RF communication to the panel.
- Locate the alarm in environmentally controlled areas where the temperature range is between 40 and 100°F (5 and 38°C) and the humidity is between 0 and 90% noncondensing.
- Locate alarms away from ventilation sources that can prevent smoke from reaching the alarm.
- Locate ceiling mounted alarms in the center of the room or hallway, at least 4 in. (10 cm) away from any walls or partitions.
- Locate wall mounted alarms so the top of the alarm is 4 to 12 in. (10 to 31 cm) below the ceiling.
- In rooms with sloped, peaked, or gabled ceilings, locate alarms 3 ft. (0.9 m) down or away from the highest point of the ceiling.
- When mounting to suspended ceiling tile, the tile must be secured with the appropriate fasteners to prevent tile removal.

**Note:** Do not mount the alarm to the metal runners of suspended ceiling grids. The metal runners can draw the magnet's field away from the alarm's reed switch and cause a false tamper alarm.

**Figure 5: Smoke detector locations**

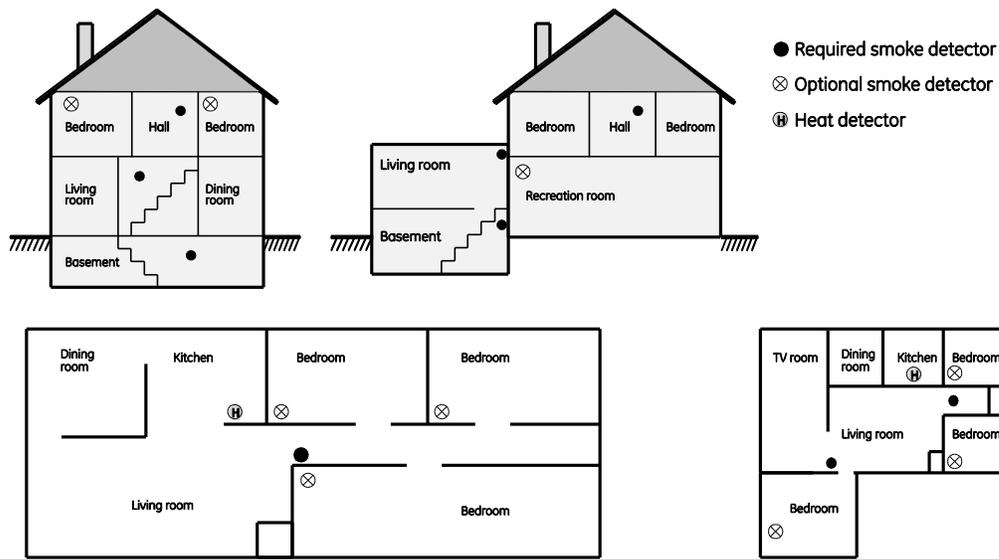

## Your floorplan

Use the following guidelines when drawing your floorplan:

- Show all building levels.
- Show exits from each room (two exits per room are recommended).
- Show the location of all security system components.
- Show the location of any fire extinguishers

## Sensor and module locations

Use Table 14 **below** and Table 15 **on page 42** to list your sensor and module locations.

**Table 14: Sensor locations**

Sensor number	Sensor name	Sensor type	Location
Example	Front door	Door/window sensor	Front door
1.			
2.			
3.			
4.			
5.			
6.			
7.			

Sensor number	Sensor name	Sensor type	Location
8.			
9.			
10.			
11.			
12.			
13.			
14.			
15.			
16.			
17.			
18.			
19.			
20.			
21.			
22.			
23.			
24.			
25.			
26.			
27.			
28.			
29.			
30.			
31.			
32.			
33.			
34.			
35.			
36.			
37.			
38.			
39.			
40.			

**Table 15: X10 module locations**

Unit #	Location
1	
2	
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	
13	
14	
15	
16	

**Table 16: Access codes**

Code description	Code
Master code	
User code 1	
User code 2	
User code 3	
User code 4	
User code 5	
User code 6	
User code 7	
User code 8	
Duress code	

## Delays

Use Table 17 below to record your delay times.

**Table 17: Delays**

<b>Delay</b>	<b>Time</b>
Exit delay	
Entry delay	

	Control panel	Remote touchpad	Keyfob	Telephone
<b>Level 0: Subdisarm the system</b>	Enter the master code while the system is disarmed.			1
<b>Level 1: Disarm the system</b>	<b>DISARM</b> , <access_code>.	Disarm 		1
<b>Level 2: Arm doors and windows</b>	<b>DOORS+WINDOWS</b> , <access_code>(if required).	ARM Doors & Windows 		2
<b>Level 3: Arm motion sensors</b>	<b>MOTIONS</b> , <access_code>(if required).	ARM Motion Sensors 		3
<b>Level 4: Arm doors, windows, motions</b>	<b>DOORS+WINDOWS</b> , <access_code>(if required), <b>MOTIONS</b> .	ARM Doors & Windows  - ARM Motion Sensors 	 - 	2 - 3
<b>Activate no delay</b>	<b>DOORS+WINDOWS</b> , <b>DOORS+WINDOWS</b> . Appends <i>-No Delay</i> to arming level text.	ARM Doors & Windows  - ARM Doors & Windows 		2 - 2
<b>Activate latchkey</b>	<b>MOTIONS</b> , <access_code>(if required), <b>MOTIONS</b> .	ARM Motion Sensors  - ARM Motion Sensors 	 -  - 	3 - 3
<b>Activate panic alarm</b>	Press <b>Fire</b> , <b>Emergency</b> , or <b>Police</b> twice within 3 sec. or hold it for 2 sec.	 +  Hold both for 3 sec.	 +  Hold both for 3 sec.	
<b>Check system status</b>	<b>STATUS</b>	SYSTEM STATUS 		0
<b>Toggle chime or special chime mode</b>	Scroll to <i>Chime</i> or <i>Special Chime</i> , <b>Enter</b> , toggle <i>On/Off</i> , <b>Enter</b> .			
<b>Bypass a sensor</b>	<b>BYPASS</b> , <master_code>, scroll to the sensor, <b>BYPASS</b> .			
<b>Time-activated lights on/off</b>	Scroll to <i>Light Schedules</i> , <b>Enter</b> , toggle <i>On/Off</i> , <b>Enter</b> .			
<b>Sensor-activated lights on/off</b>	Scroll to <i>Sensor Lights</i> , <b>Enter</b> , toggle <i>On/Off</i> , <b>Enter</b> .			
<b>Specific light on</b>	Press *, <unit_num>.	 - <unit_num>.		* - <unit_num>.
<b>Specific light off</b>	Press #, <unit_num>.	 - <unit_num>.		# - <unit_num>.
<b>All lights on</b>	To turn on all lights controlled by lamp modules, press * twice. The panel displays <i>All Lights On</i> .	 - 		* - *
<b>All lights off</b>	To turn off all lights controlled by lamp modules, press # twice. The panel displays <i>All Lights Off</i> .	 - 		# - #

a. A minus sign (-) between buttons means *press one then the next*; a plus sign (+) between buttons means *press both simultaneously*.